

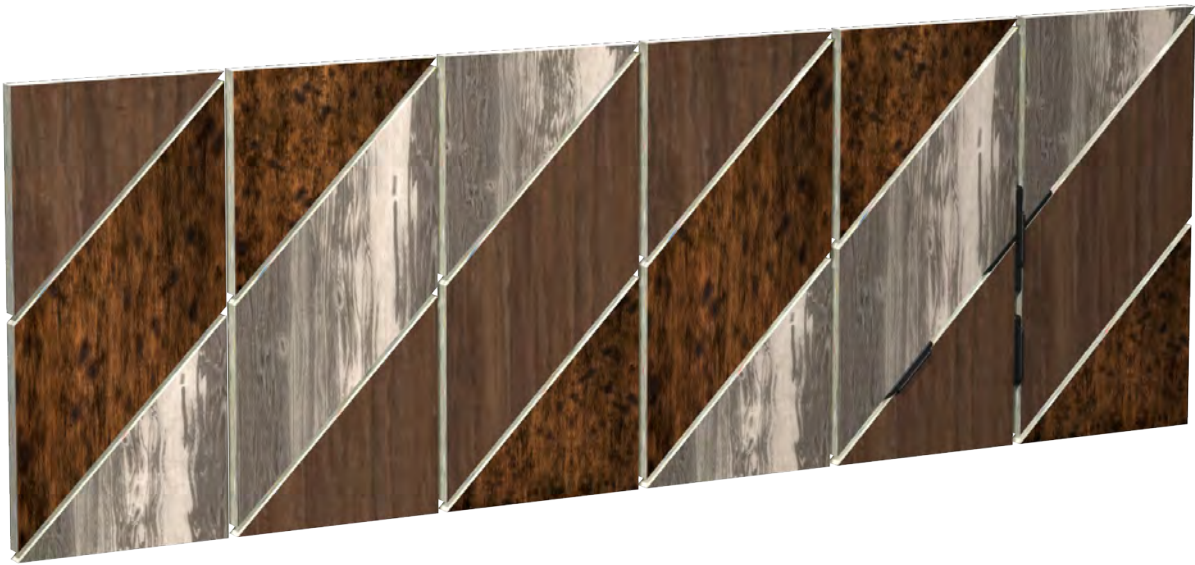


# Parallelograms Acoustic Panels Kit Installation Guide Using Spacer Tools

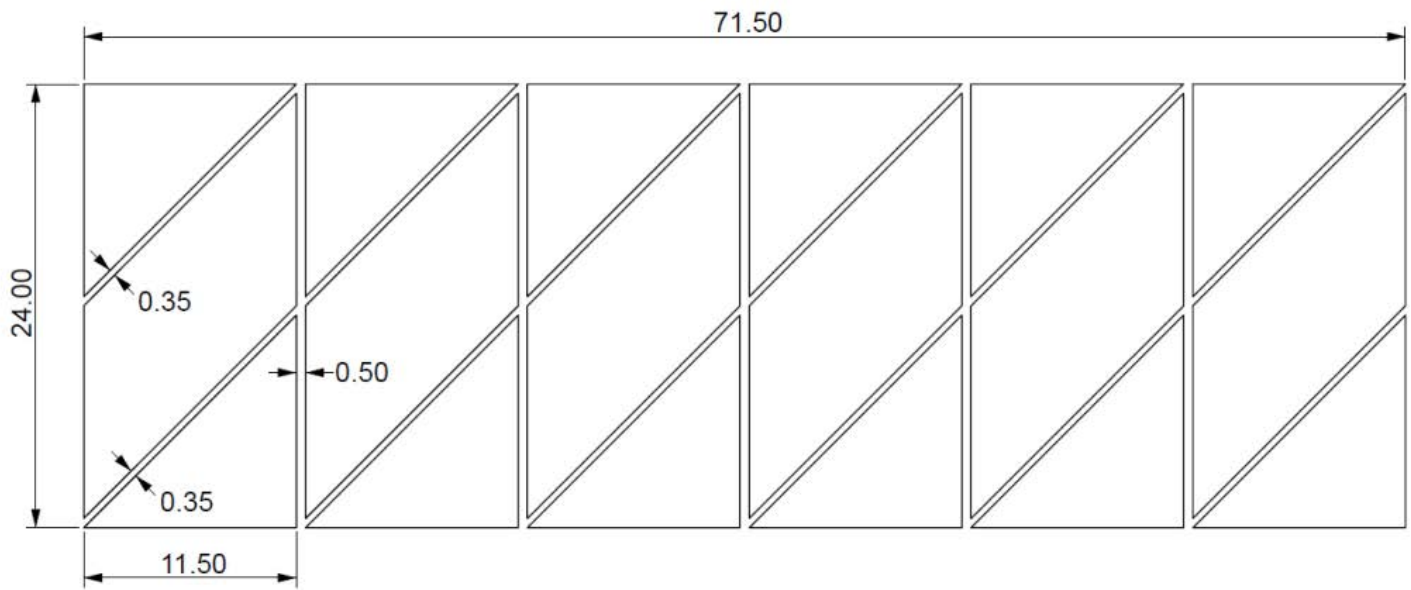

**Step 1:** Measure for desired placement of the kit on the wall. If it will be placed close to a ceiling, allow an extra 1-2 inches at the top. Then, draw a level line on the wall where the bottom of the kit will be positioned.

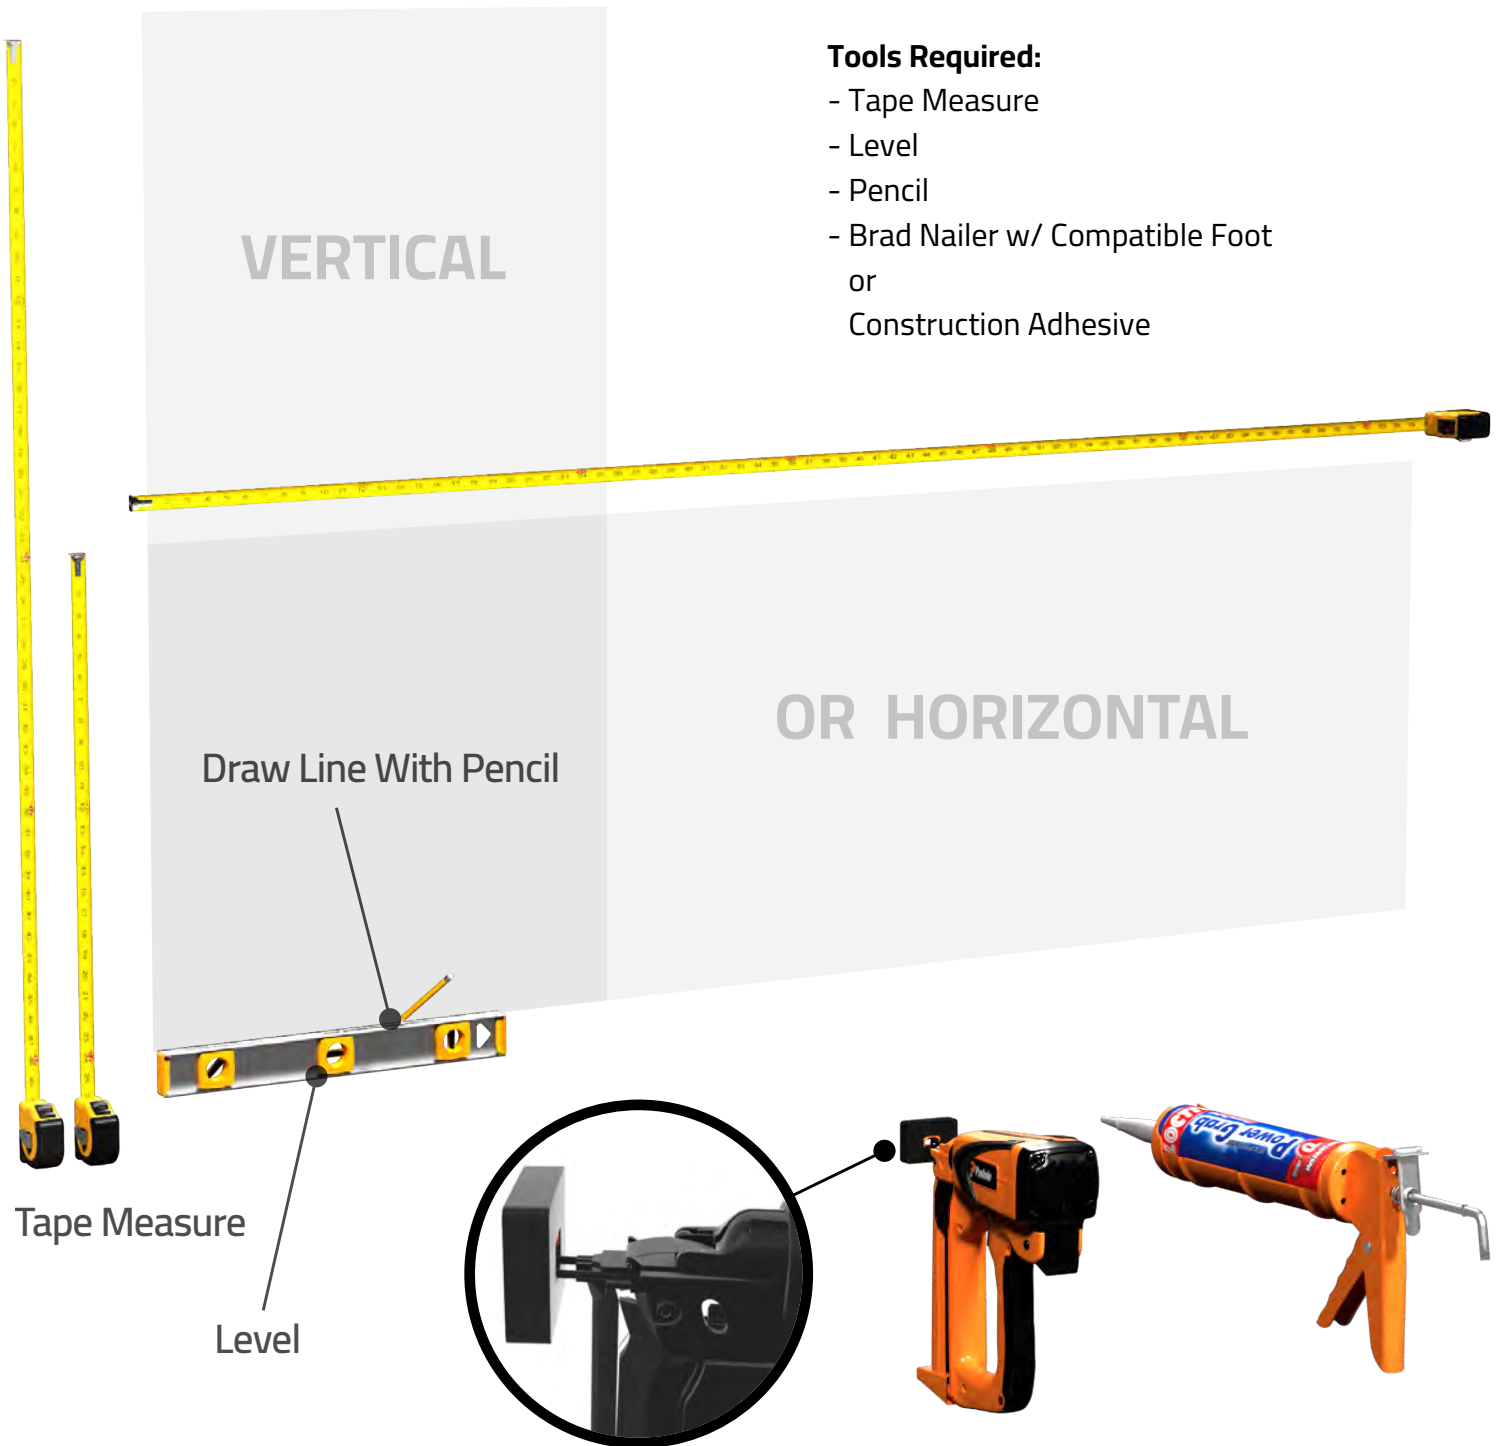


**Step 2:** Prepare to fasten each piece to the wall with a brad nailer or construction adhesive.

NOTE: We recommend using a Paslode® Brad Nailer with our Compatible Foot, or Loctite® Power Grab® Heavy Duty. We do not recommend using a brad nailer with fabric acoustic panels (i.e, Anchorage, FR701, & Synopsis). Always use eye protection and follow the brad nailer's manufacturer instructions for safe use.



**Step 3:** Starting from the left side, use the set of spacer tools as a guide to fasten each piece to the wall as shown. Make sure the lowest pieces are positioned accurately along the drawn line.

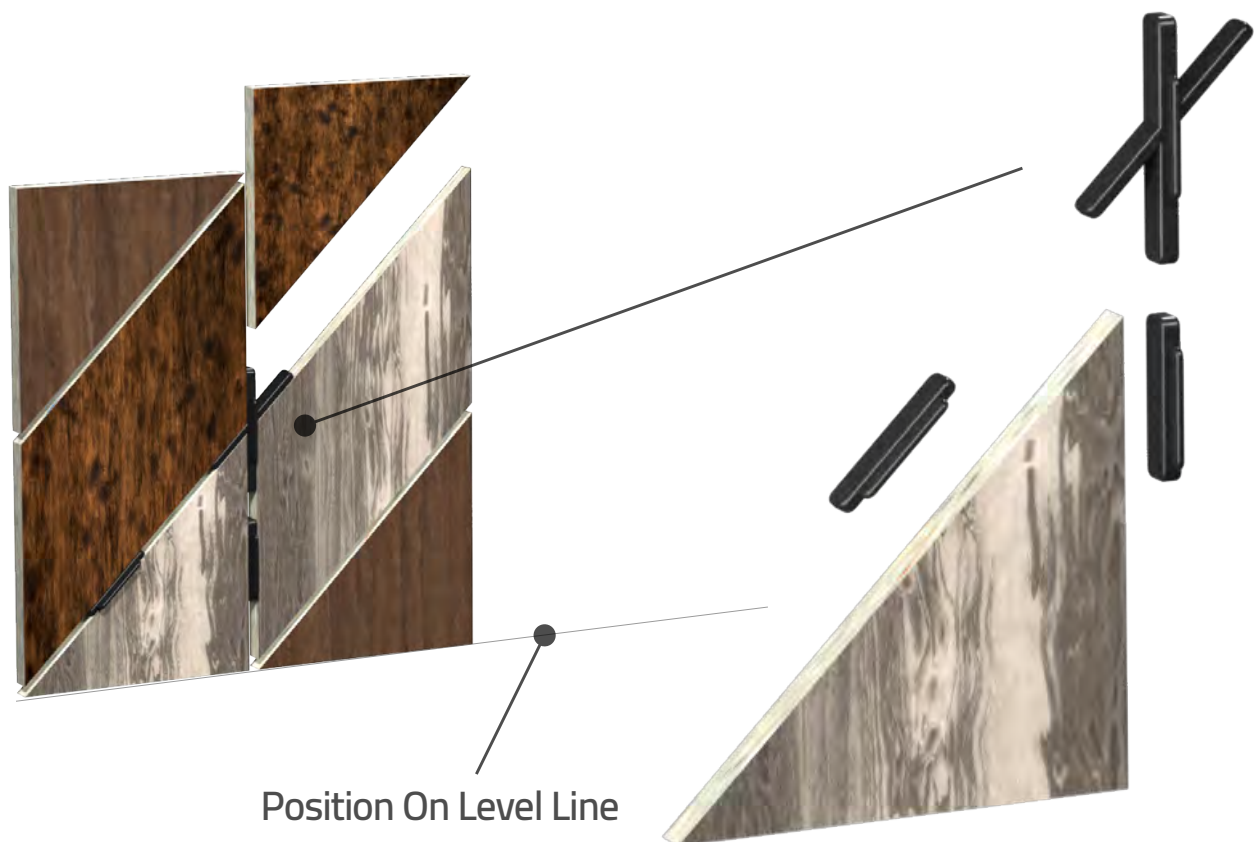

NOTE: Use the finished kit image below, images on the product page, and/or the printed layout template (if purchased) as a guide for placing each piece.

